

Technical Support Bulletin: S3-FSMCP-01

Procedure for Setting the Default Communication Port on the Motherboard in the BVS-S3


**BTECH Inc.
10 Astro Place
Rockaway, NJ 07866
Tel: 973-983-1120
Fax: 973-983-1125**


This procedure outlines the steps required to set the default Communication port on the Motherboard in the BVS-S3.

NOTE: The BVS is shipped with the internal communication port as the default port, unless it has been requested otherwise.


1. Remove the cover from the chassis.
2. Locate the jumper pins labeled "Default Port" for the communication port settings in the lower left corner of the motherboard.
3. To set the internal communication port on the motherboard as the default, place jumpers in the 3 left-most jumper positions on the motherboard (labeled "1").
4. To set the external communication port on the outside of the chassis as the default, place jumpers in the 3 right-most jumper positions on the motherboard (labeled "2").
5. If required, connect the communication device to the internal port before replacing chassis cover.
6. Replace the chassis cover.

Please call **BTECH Inc.** Technical Support if any questions arise.

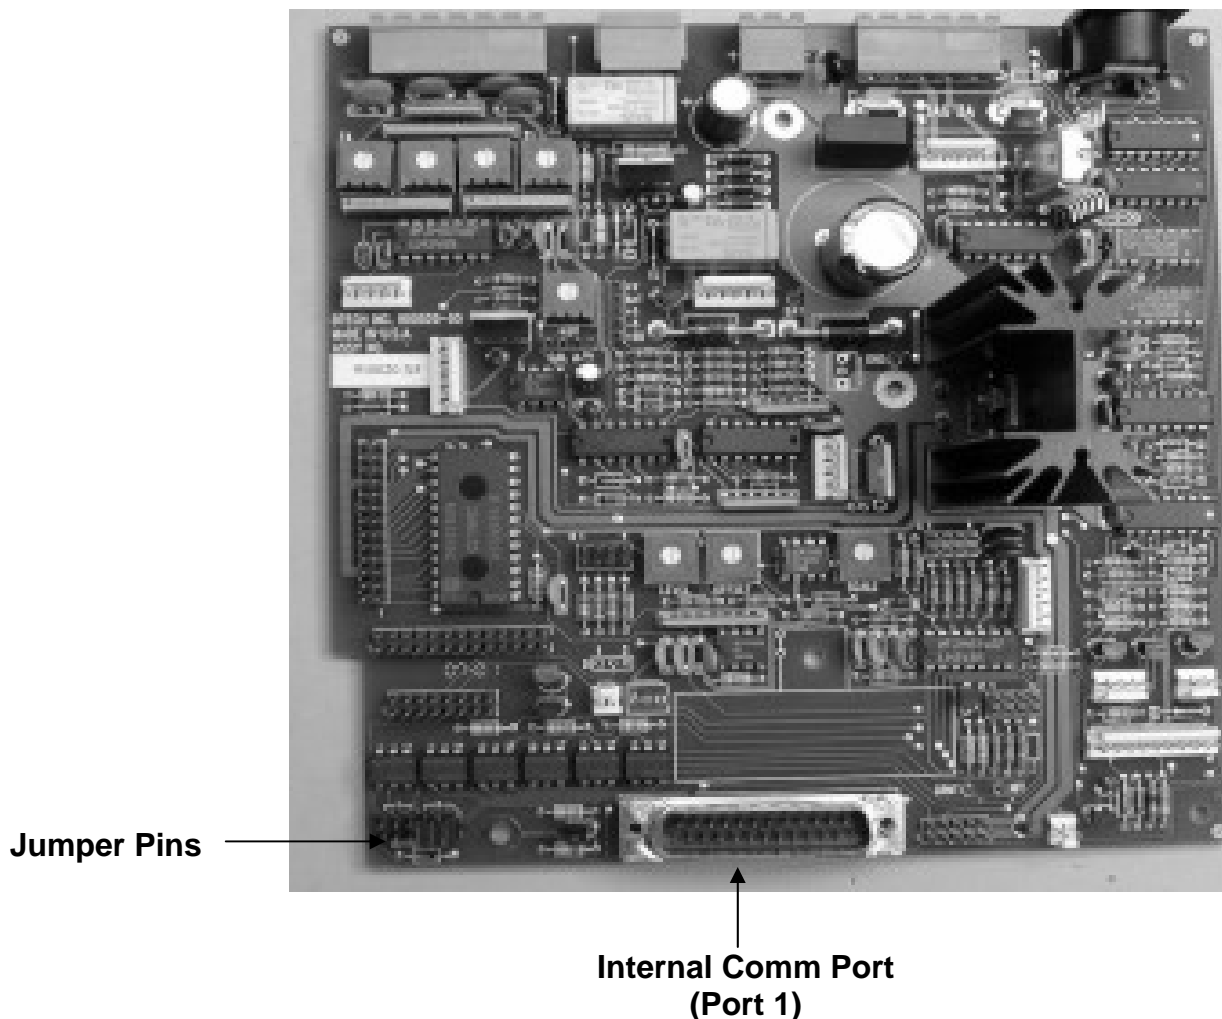

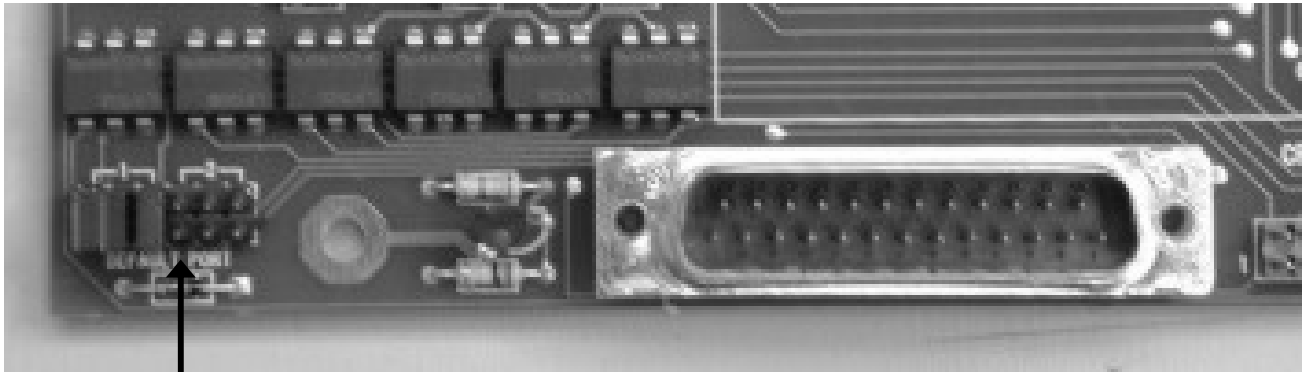

Jumper Settings for the Internal Port (Port 1) as the Default Port

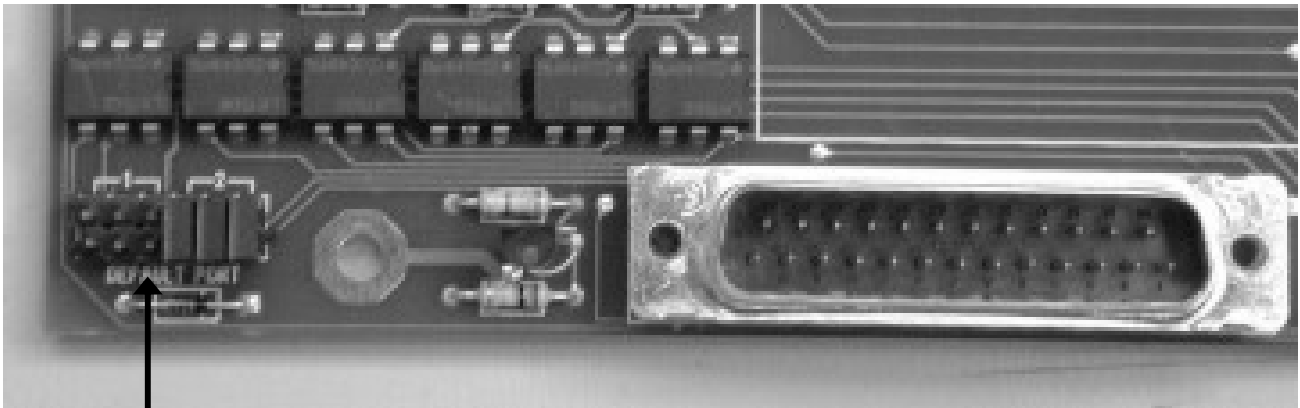

Jumper Settings for the External Port (Port 2) as the Default Port